



Lenovo IdeaPad G50-45 Keyboard Replacement

This guide will teach you how to replace your laptop keyboard

Written By: Saulo Gomes





TOOLS:

- [Prying Tool](#) (1)
- [Phillips #2 Screwdriver](#) (1)



PARTS:


- [Lenovo G50-45 Keyboard](#) (1)

Step 1 — Keyboard



- Using the Philips head screwdriver remove the three screws on the bottom panel.

Step 2

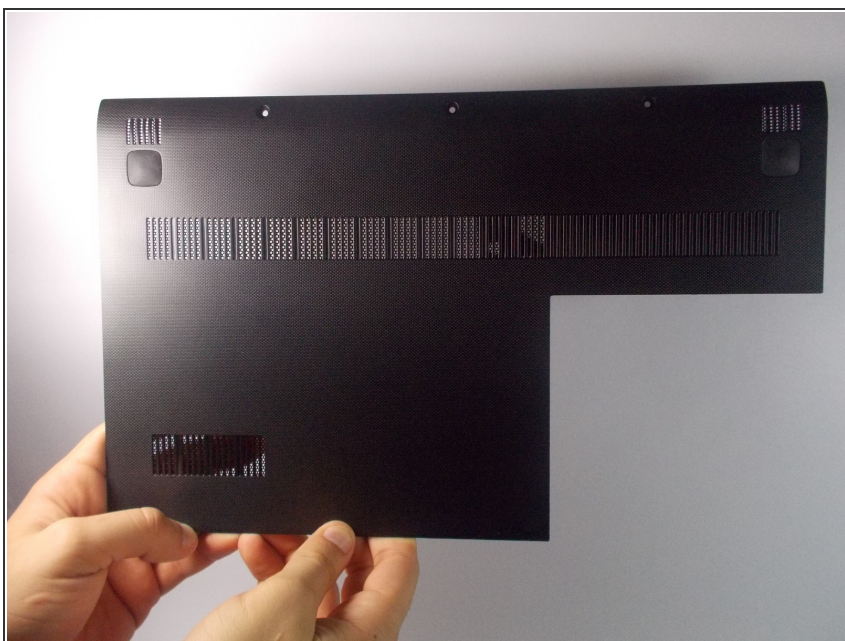


- Using your fingers slide the panel away from the battery to remove it.

Step 3




- There are three screws that need to be removed in order to remove the keyboard.
- They are labeled with M2X6 and the image of a keyboard

Step 4

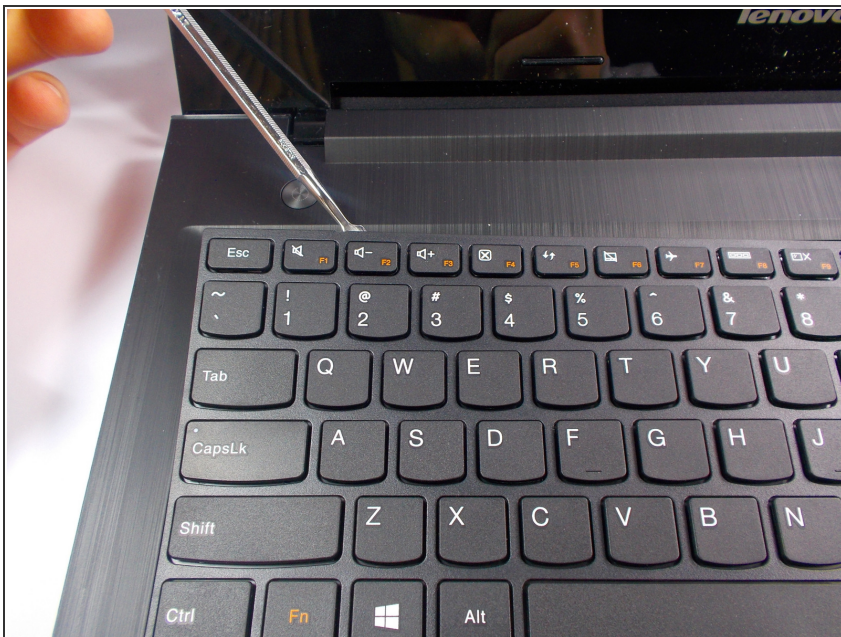


- Once the screw on the bottom have been removed, open the laptop so that you can access the keyboard.
- starting at the top left corner of the keyboard insert a prying tool between the keyboard and the laptop casing.

Step 5

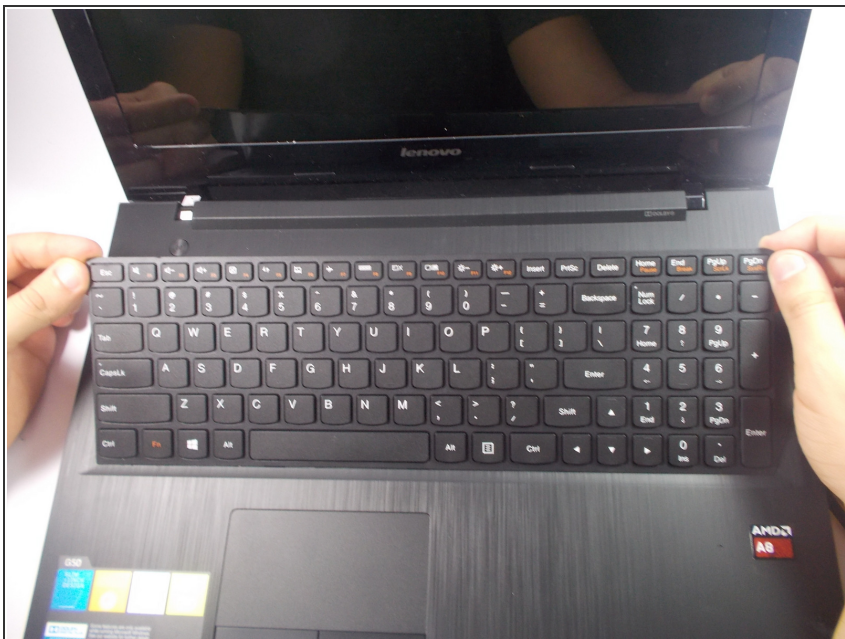

- Once the top of the keyboard has been released the keyboard can be pulled away from the bottom.

Step 6

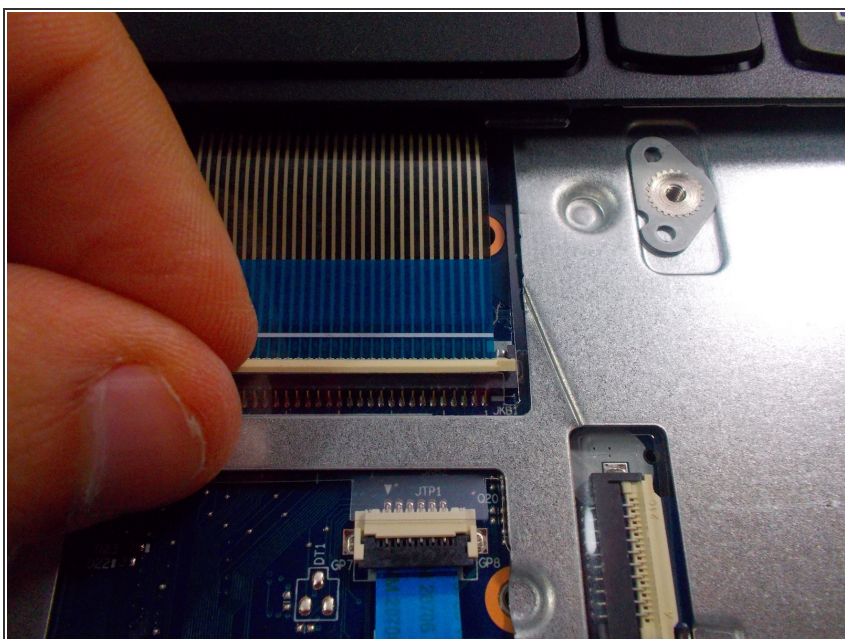


- To release the cable the white tab holding it in must be lifted up.
- Using your fingers lift the tab so that it points up

Step 7



- The cable is now free and the keyboard can be removed.

Step 8

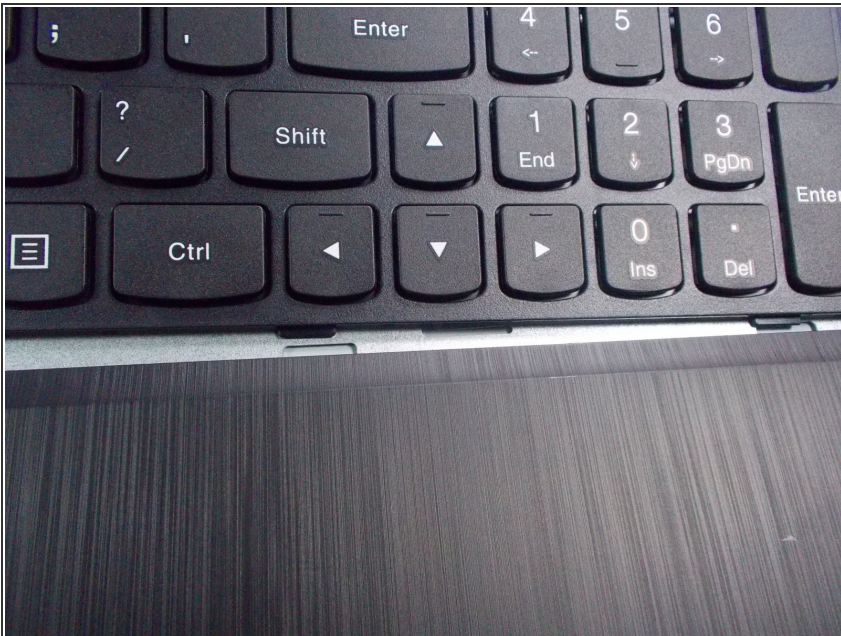

- When replacing the keyboard make sure the the bottom is slid in first.
- Finish it by pushing down on the top of the keyboard down until you hear each part pop in.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 12:09:35 AM.